


Installation Manual

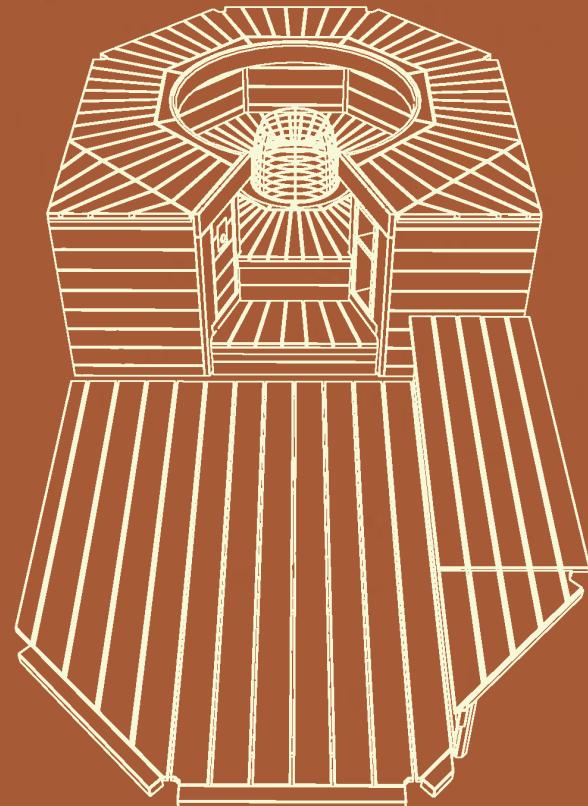

Hele Double Luxury

haljas

Introduction

This installation manual is provided in advance to prepare for the arrival of the product. It is a complete guide for site preparation, unloading, transporting and installing of the sauna. All electrical works should be carried out by a local certified electrician according to the heater manufacturer's manual.

It is mandatory to read and follow this manual and its annexes to ensure safety. Keep this manual in a safe place for revision, in case the product might be relocated at any given time.

To get familiar with the product, we insist that you read these instructions very carefully, even if you have worked with a similar product before. The installation manual must be thoroughly read before the arrival of the sauna. The installer is personally responsible for familiarizing himself/herself with the instructions and for following them carefully.

The manufacturer is not liable for any damages that occur due to ignoring the safety standards and instructions in this manual.

When receiving the product, make sure that it has not been damaged after transportation. If you notice any damage or lack of parts, please contact the manufacturer immediately.

Manufacturer

Haljas Houses OÜ

Pikk 22, Elva, Elva parish, Tartu county 61505, Estonia

+372 569 93 420, info@haljas.com

www.haljas.com

Sauna Parameters

haljas

| Metrical | | | | | | | | | | | | |
|-------------|----------------------|------------------------|----------------------|------|------------|------|------------|-------|-----------|------|-------------------------|---------------------------|
| Hele Double | Shipping weight, kg | Weight, no heater, kg | Area, m ² | | Height, mm | | Length, mm | | Width, mm | | Volume, m ³ | Heating time (indicative) |
| | | | Ext. | Int. | Ext. | Int. | Ext. | Int. | Ext. | Int. | | |
| | 2606 | 2200 | 8.82 | 8.6 | 2550 | 2200 | 4380 | 4280 | 2250 | 2150 | 2 x 9.5 | 45°C/hour |
| Imperial | | | | | | | | | | | | |
| Hele Double | Shipping weight, lbs | Weight, no heater, lbs | Area, sq. ft | | Height, ft | | Length, ft | | Width, ft | | Volume, ft ³ | Heating time (indicative) |
| | | | Ext. | Int. | Ext. | Int. | Ext. | Int. | Ext. | Int. | | |
| | 5746 | 4851 | 95 | 93 | 8.37 | 7.22 | 14.4 | 14.04 | 8.37 | 7.22 | 2 x 335 | 113°F/hour |

Personal protective equipment

Personal protective equipment or PPE for short, is any gear that a user must wear to protect themselves against one or several risks. Always use personal protective equipment relevant to your type of work that complies with the rules, regulations, and standards in your country.

During installation, lifting, utilization and maintenance of the product, users, and persons in the immediate vicinity of the product must wear high quality personal protective equipment.



Failure to use personal protective equipment can result in damage of the users' health and/or bodily injury.

The personal protective equipment used must be selected to suit the size of the wearer and take account of any other special mental or physical features of the person.

The personal protective equipment used must not be too large, small, or baggy and must be chosen in such a way as to prevent getting stuck between the working parts or moving parts of the product. Loose hair must be tied up to prevent hair getting entangled in or attached to the product.

Use of at least the following personal protective equipment is required:

The user of the equipment must assess the risks arising from the working environment and, if necessary, use additional personal protective equipment. The use of more personal protective equipment than specified here is permitted.

| | | | | | | | |
|---|-------------------------------|---|-----------------------------|---|----------------------------|---|---------------------------|
|  | Wear protective gloves |  | Wear safety footwear |  | Wear eye protection |  | Wear safety helmet |
|---|-------------------------------|---|-----------------------------|---|----------------------------|---|---------------------------|

Before delivery

Permits & ground preparation


Always make sure that the planned space does not go against any building laws or local fire department's requirements.

We recommend you have the plot inspected by a qualified architect or building engineer prior to proceeding. You are also most welcome to turn to your local authorized Haljas retailer for advice.

Leg placement & foundation



haljas

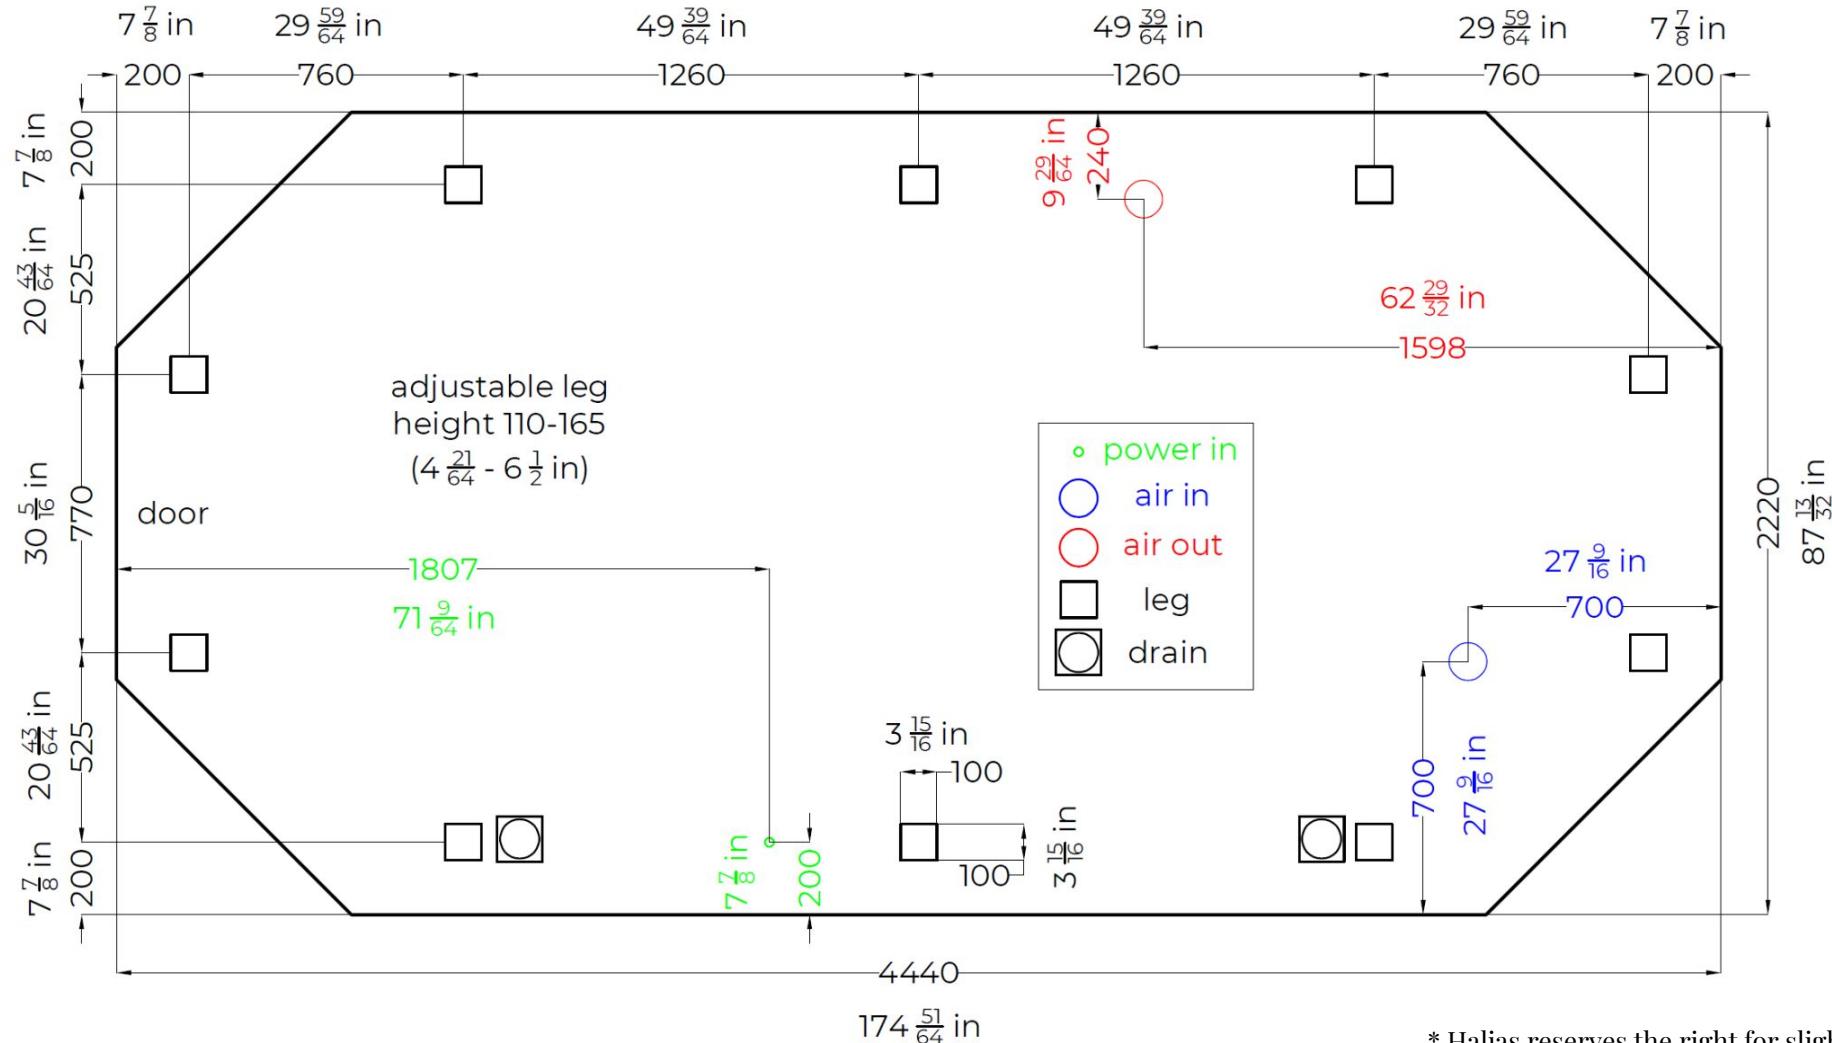

* Haljas reserves the right for slight changes in details & measurements.

Permits & ground preparation

haljas

Placing on Soil

When placing your sauna directly on soil, the ground must be properly prepared to ensure stability and long-term durability.

Groundwork: Remove the top layer of soil and replace it with a well-draining, load-bearing material such as gravel, splinters, or sand.

Foundation Support: Place and level concrete tiles horizontally—each tile should align with the sauna legs to provide full support and be at least **30x30 cm or 11 13/16" x 11 13/16"**.

Power Connection: The base of the sauna is a **6cm or 2 3/8"** thick solid wood panel. A hole must be drilled into the base of the sauna according to the chosen heater setup and cable thickness. This will have already been done by the manufacturer in all cases where a heater has been installed. Prior to the arrival of the product, have a local certified electrician bring the power cable under the sauna according to the leg scheme marking - “Power in”.

If the heater will be installed locally, discuss this matter with your Haljas retailer.

Ventilation: It is essential to maintain proper ventilation beneath the sauna. Sauna legs or skid provide the minimum required clearance and must remain unobstructed at all times.

Moisture Protection: Limit vegetation growth underneath and around the sauna to reduce the risk of moisture-related damage.

Permits & ground preparation

haljas

Placing on Terrace or Other Surfaces

The sauna can also be installed on pre-existing hard surfaces such as terraces, rooftops, or paved stone areas. Alternative foundations such as concrete posts or screw pegs may also be used.

Surface Requirements: Ensure that the surface is completely level, load-bearing, and capable of supporting the full weight of the sauna—including the number of users it is designed for. Refer to the “Sauna Parameters” section for weight and dimension details.

Ventilation: Even on hard surfaces, adequate airflow beneath the sauna is critical. The existing skid provides the necessary clearance and must not be altered or obstructed.

Power Connection: The base of the sauna is a **6cm or 2 3/8"** thick solid wood panel. A hole must be drilled into the base of the sauna according to the chosen heater setup and cable thickness. This will have already been done by the manufacturer in all cases where a heater has been installed. Prior to the arrival of the product, have a local certified electrician bring the power cable under the sauna according to the leg scheme marking – “Power in”.

If the heater will be installed locally, discuss this matter with your Haljas retailer.

Site Access


Please ensure that there is clear and safe access to the intended installation site. If the product will be positioned using a forklift, telehandler, or crane, verify that the access route is wide enough for the machinery, free of obstructions, and safe for operation. To ensure the safety of all individuals, appropriate warning signs must be displayed to restrict access to the area during all lifting and handling operations. If you are uncertain about any part of the process, please consult your local authorized Haljas Houses retailer.

Tools:

| | | | |
|---|-----------------|---|--------|
|  | Cordless driver |  | Knife |
|  | Wrench set |  | Ladder |

Exterior measurements


haljas

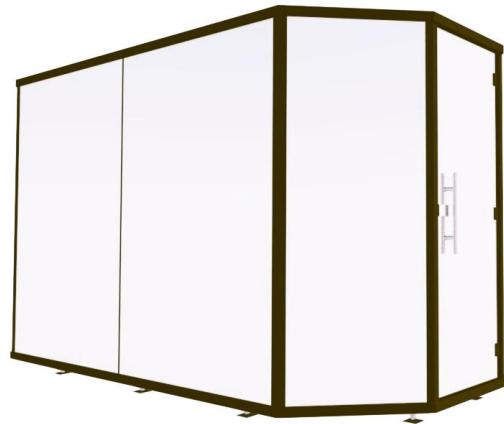

Sideview

175 $\frac{63}{64}$ in
4470


Frontview

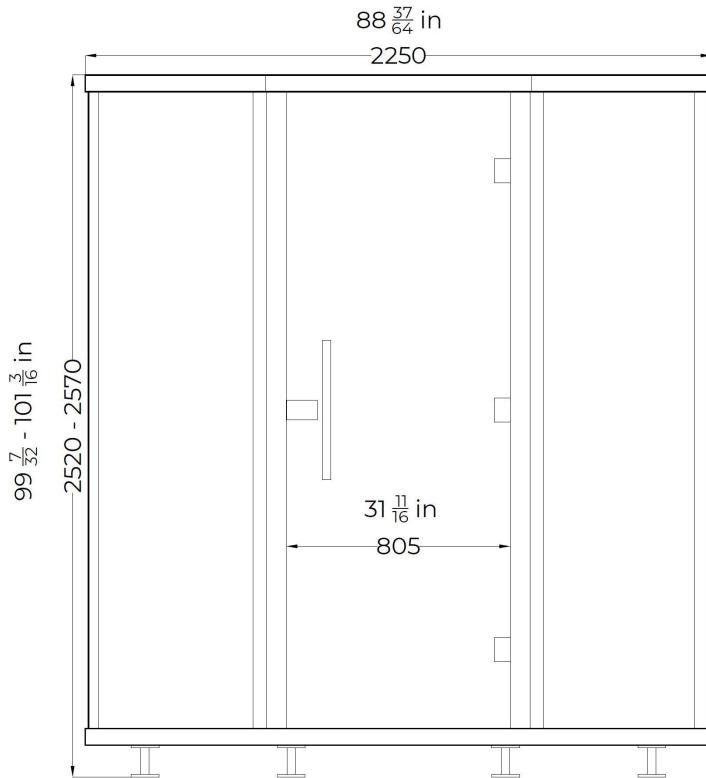

*Adjustable leg height 115-165
4 $\frac{17}{32}$ - 6 $\frac{1}{2}$ in.


* Haljas reserves the right for slight changes in
details & measurements.

Interior measurements

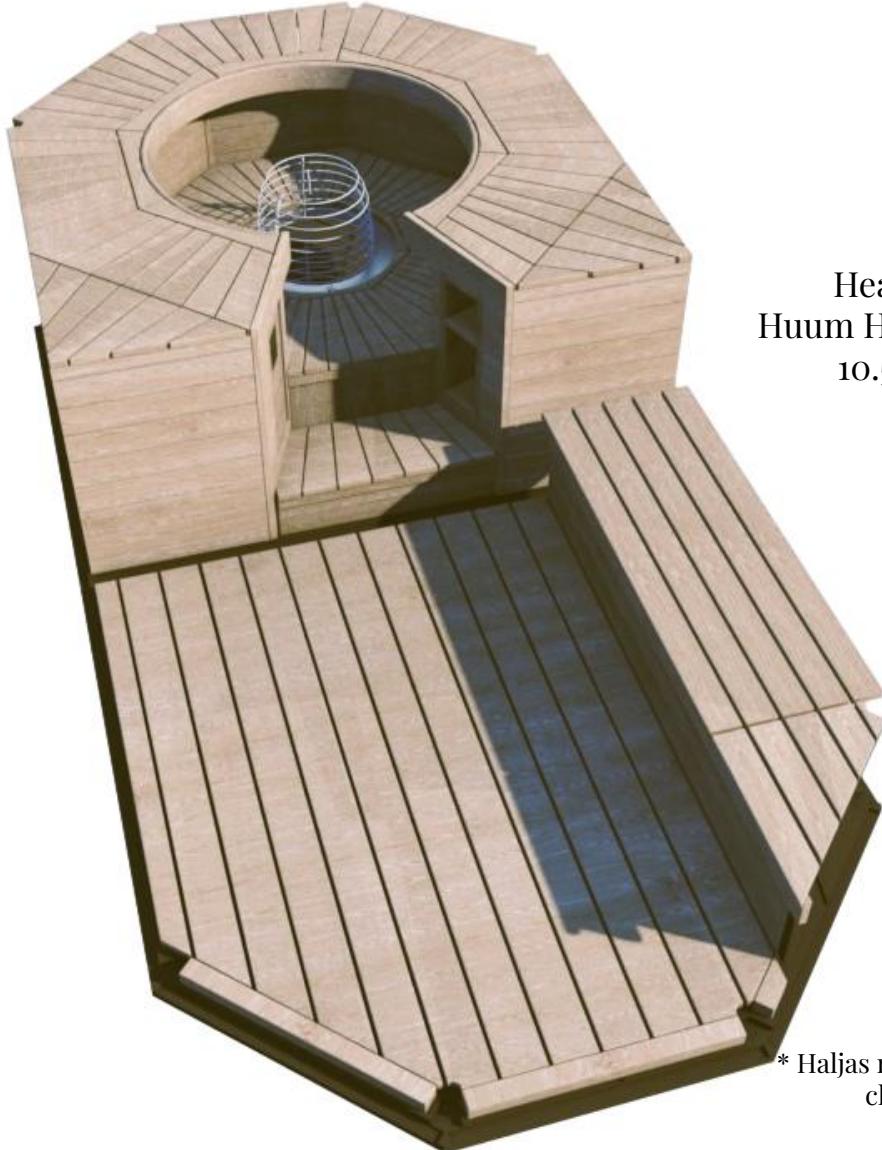

Heater:
Huum HIVE Mini
10.5kW

* Haljas reserves the right for slight changes in details & measurements.

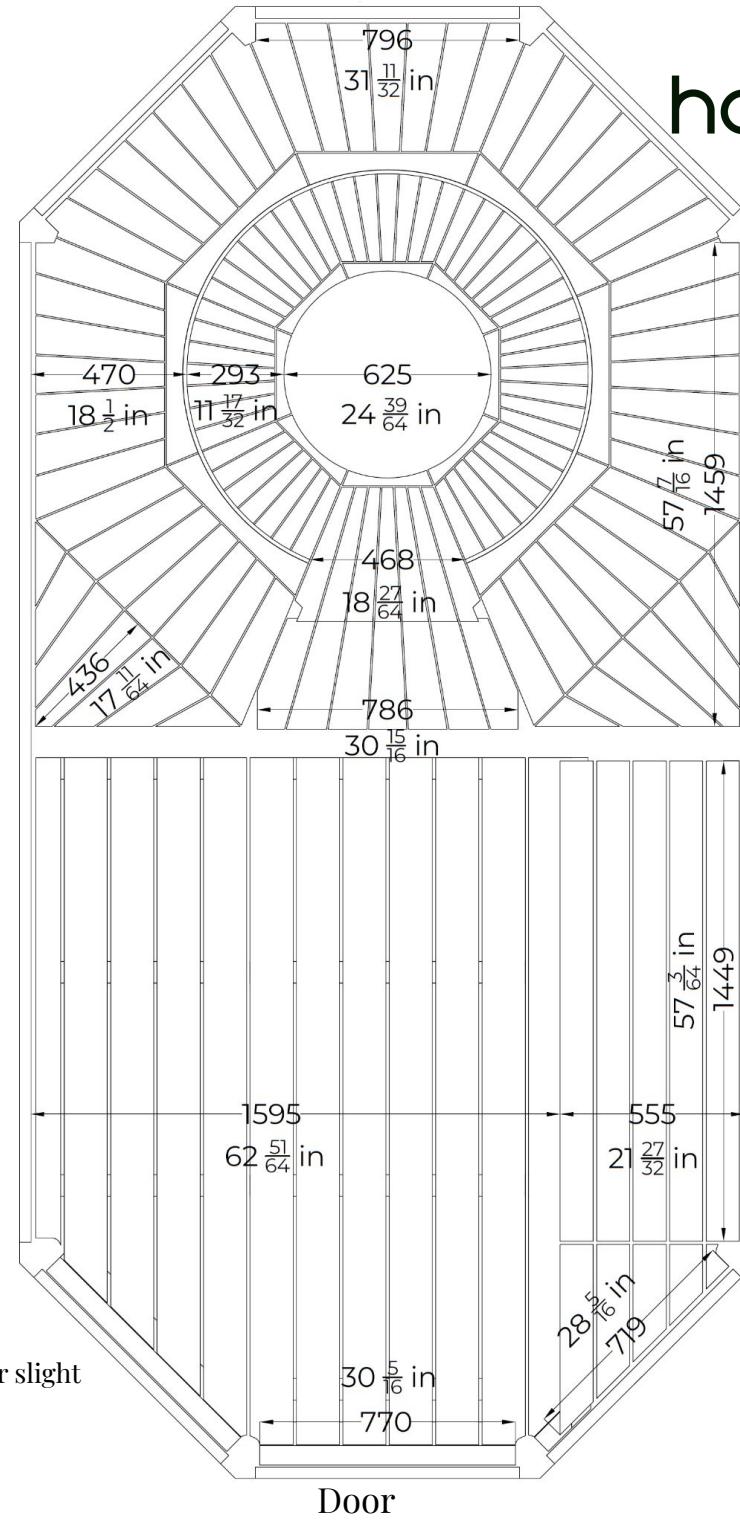


haljas

Interior measurements

haljas



Frontview

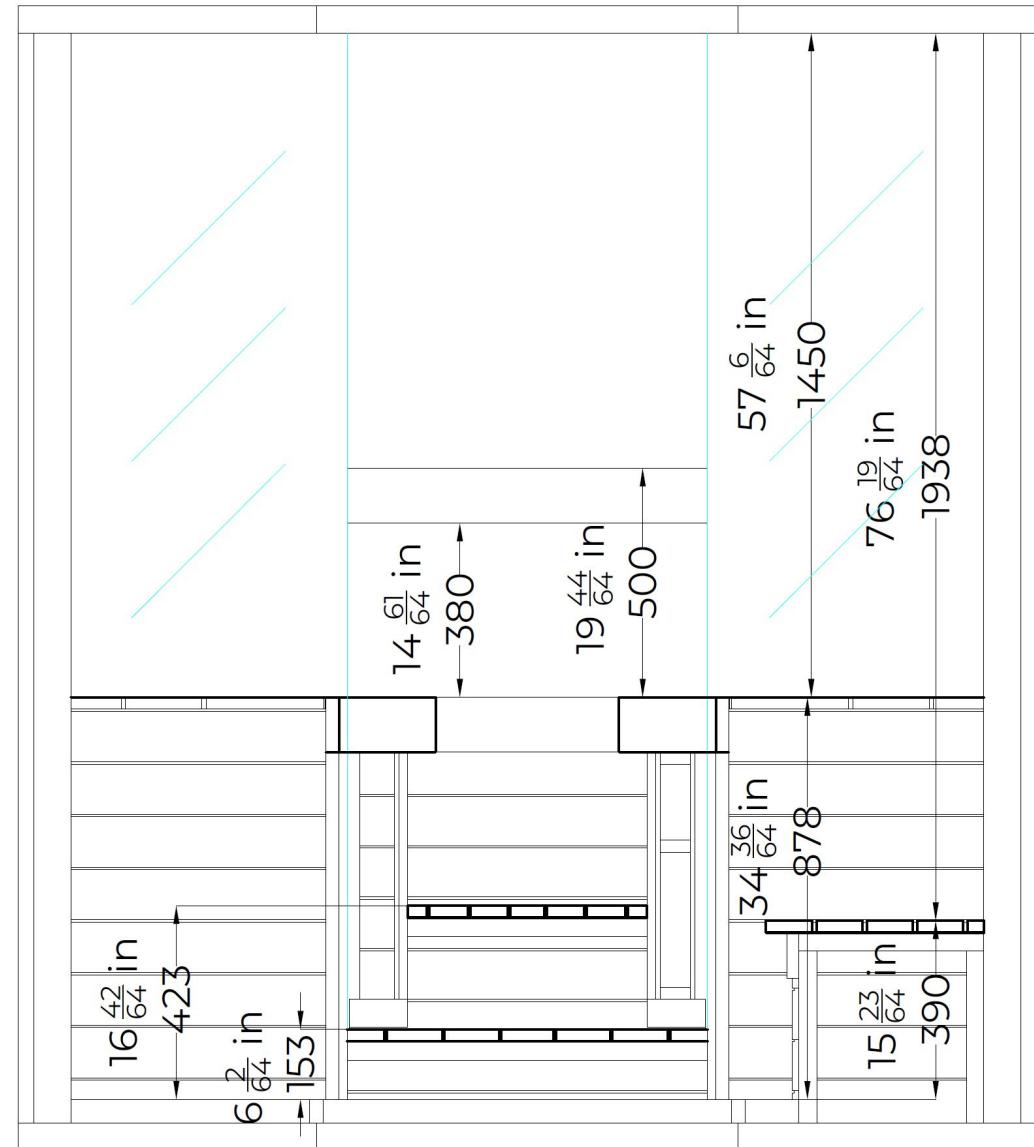


* Haljas reserves the right for slight changes in details & measurements.

Lifting plates

haljas



* Haljas reserves the right for slight changes in details & measurements.

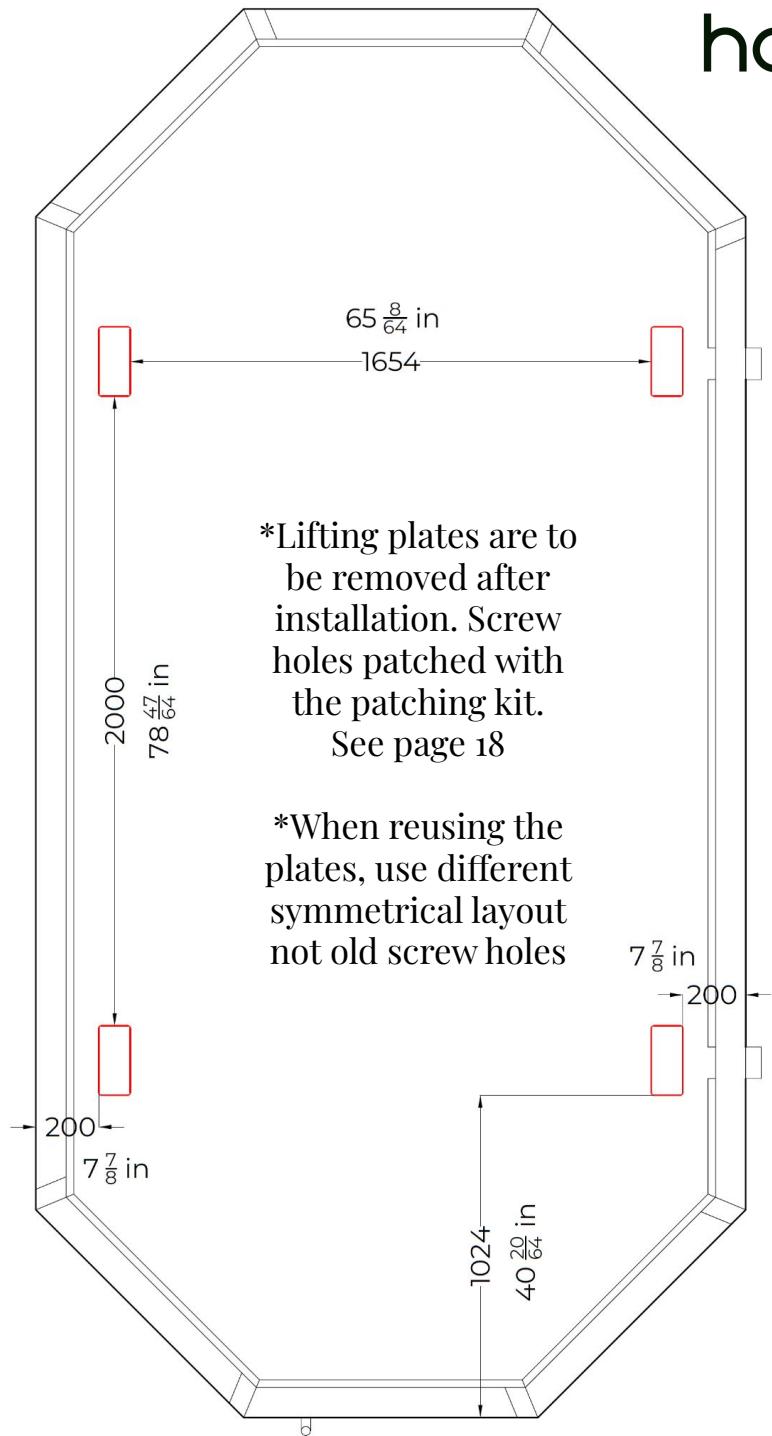


*Lifting plates are to be removed after installation. Screw holes patched with the patching kit. See page 18

*When reusing the plates, use different symmetrical layout not old screw holes

Packaging measurements

Europe delivery


haljas

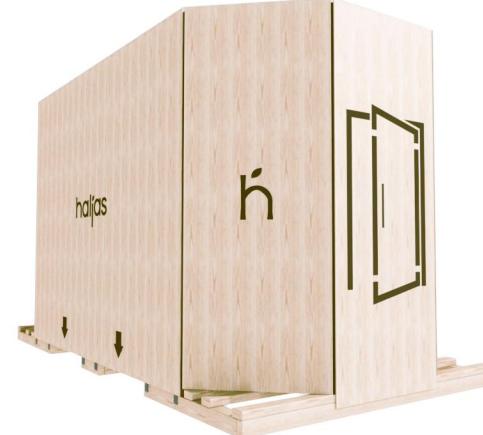

Frontview

$93\frac{5}{16}$ in


2370

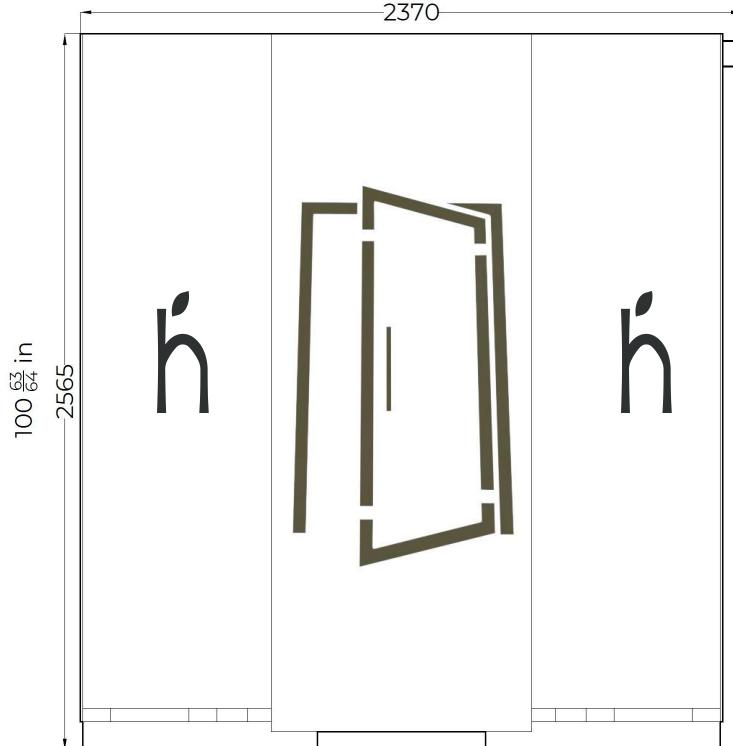

Sideview

$177\frac{61}{64}$ in

4520

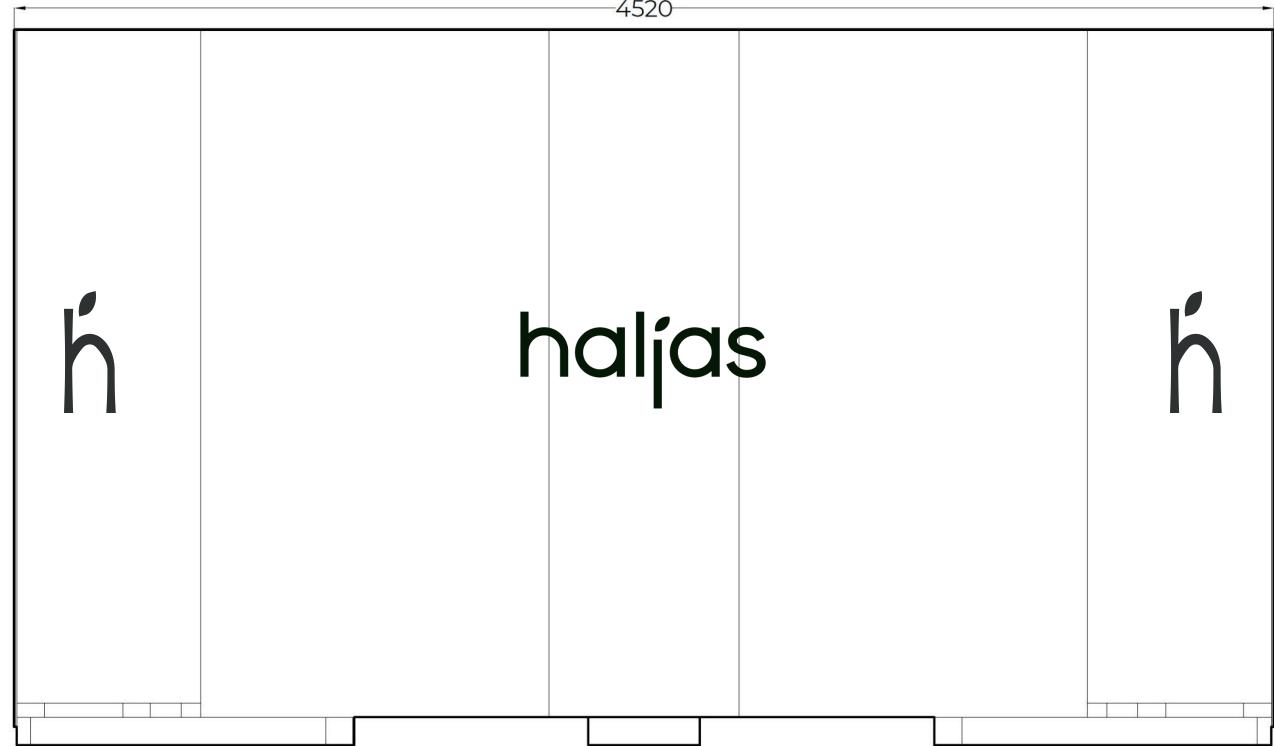

* Haljas reserves the right for slight changes in details & measurements.



Lifting & unboxing

Europe delivery

Whether your sauna is transported in a closed truck or an open trailer, there are two options for unloading:

1. Hele Double can be lifted with a forklift or two pallet jacks from the sides that are marked with arrows.
2. Hoisting the sauna only with lifting plates on top of the roof. Lifting plates need to be removed after installation. Minimum length for straps is 2,5m (8ft).




- Cut the white straps. Unscrew the veneers from the bottom side and lift them off.
- Unscrew the metal plates from the skid and remove the skid connection pieces.
- Lift the sauna from top hooks and lift it off the pallet.
- Remove the wrap, foam and cardboard.

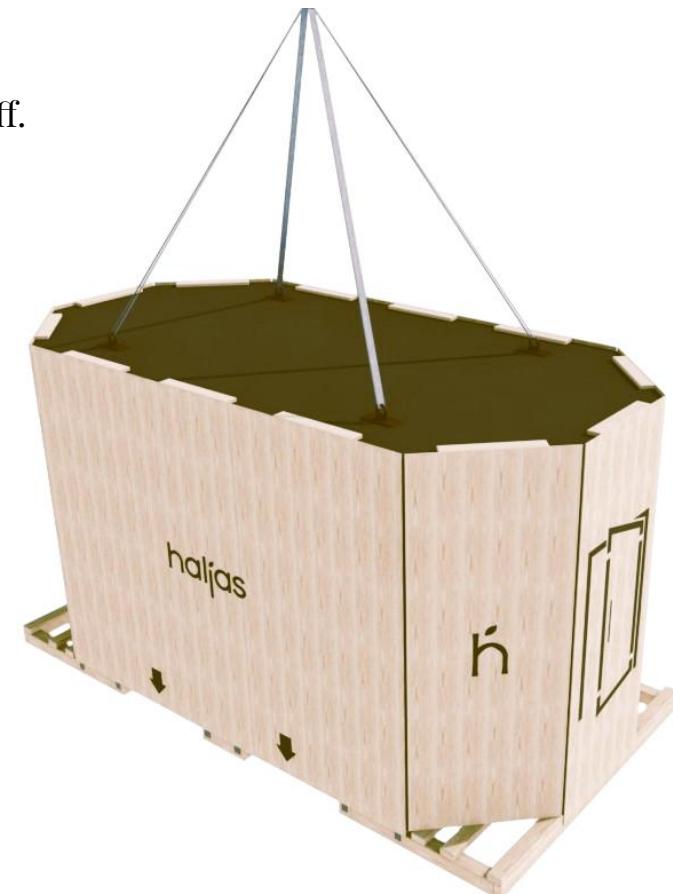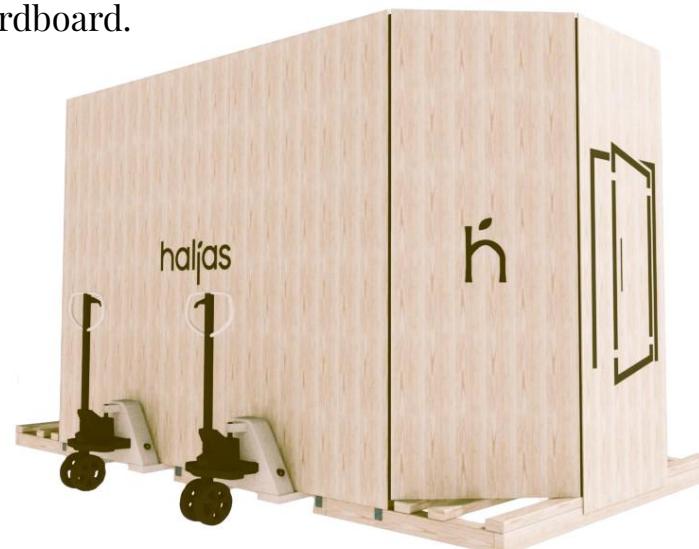

Packaging measurements

Worldwide delivery, except Europe

haljas

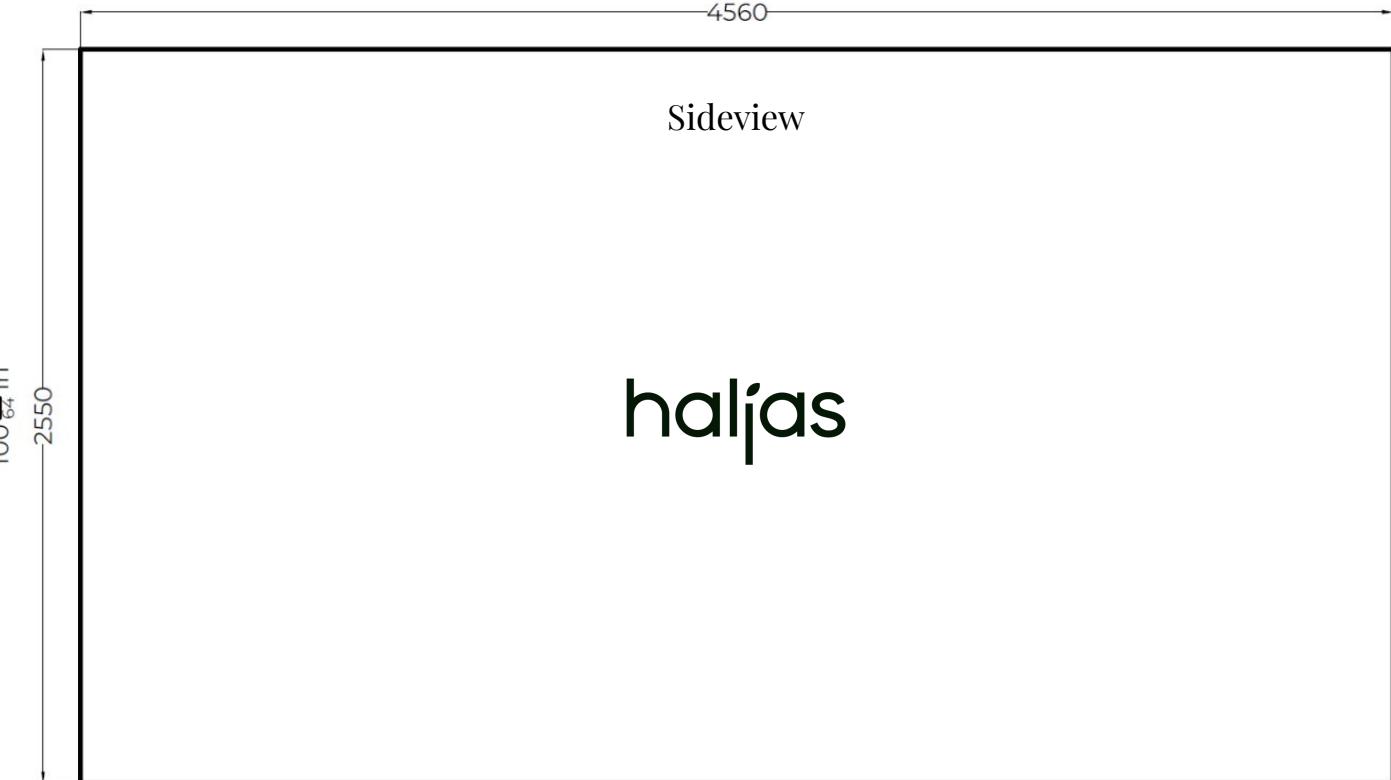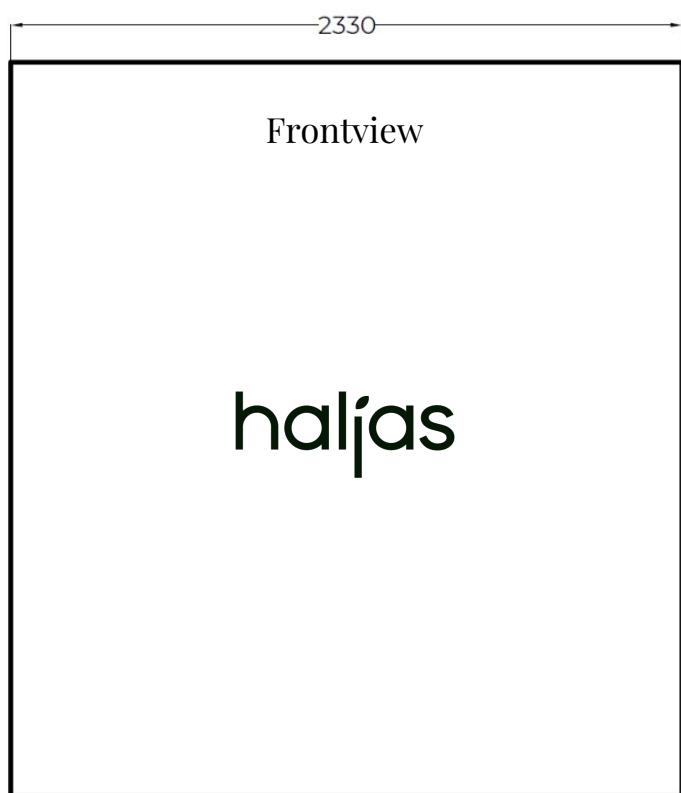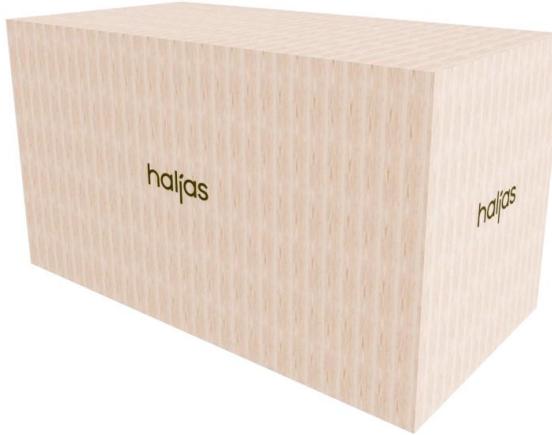

* Haljas reserves the right for slight changes in details & measurements.

Lifting & unboxing

Worldwide delivery, except Europe

Depending on the circumstances you can either move the sauna from the truck to its final location while still inside the protective package (this might be reasonable in case of different obstacles like trees or bushes which might damage the sauna on the way), or if the path is clear, the wooden crate can be removed when the sauna has been taken off the truck. Under the top veneer you will find lifting hooks.

1. Remove the top veneer by unscrewing all the screws.
2. Remove all veneer sides.
3. Detach the stainless steel legs from the bottom and keep them nearby.
4. Use a wrench to undo all nuts under the bottom.
5. Lift the sauna from the lifting plates on top of the roof high enough to enable access underneath.
6. Attach all legs to the sauna and make sure they are all set at the minimum height.
 - Start at the bottom by pulling the wrap away from the sauna while cutting the plastic.
 - Continue cutting the wrap all the way to the top.
 - Do the same on the opposite side of the sauna.
 - Pull off the plastic.
 - Remove all tape and cardboard.



Patching instructions

haljas

Red Lifting plates on top of the roof need to be unscrewed, removed and patched within a month of installation



1. Inside the sauna, you will find a cardboard box that contains a patching kit.
2. Follow these steps to patch the screw holes on the roof:
3. Choose a day with dry weather for the job.




Hourglass SaunaStep

haljas design

* The SaunaStep is not included with standard order of Hele Double.

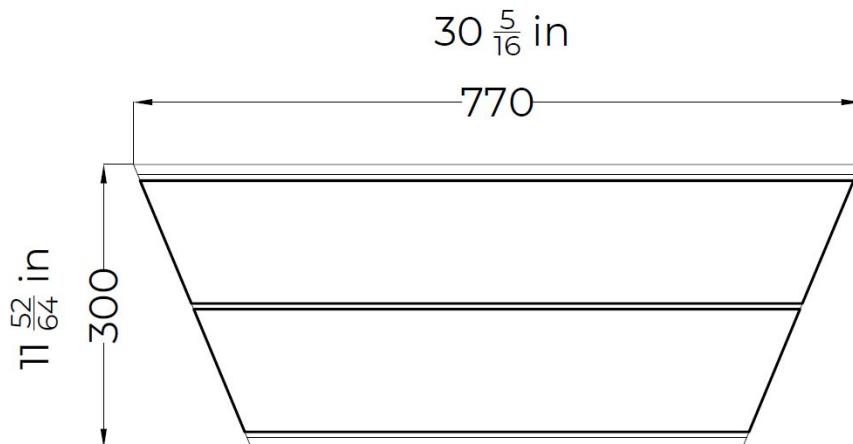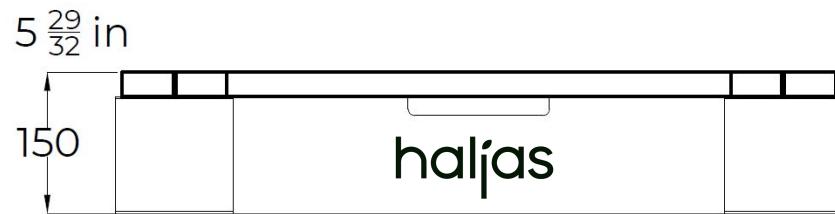

* Haljas reserves the right for slight changes in details & measurements.

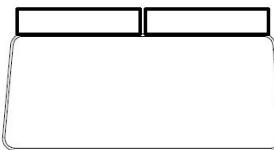

*The Sauna Step should be kept inside the sauna when not in use. This helps protect it from the outdoors.

